



**A - Ignition Components**

- 1 - Distributor
- 2 - Timing Lead
- 3 - Shift Cutout Switch
- 4 - Ignition Coil

**B - Starting, Charging and Choke Components**

- 1 - Alternator
- 2 - Electric Choke
- 3 - Ground Stud
- 4 - Starter Motor
- 5 - Oil Pressure Switch
- 6 - Fuel Pump
- 7 - Fuse
- 8 - Starter Slave Solenoid

**C - Audio Warning Components**

- 1 - Oil Pressure Switch
- 2 - Drive Unit Gear Lube Monitor
- 3 - Water Temperature Sender

**D - Instrumentation Components**

- 1 - Oil Pressure Sender
- 2 - Water Temperature Sender
- 3 - Trim Sender